

COMMISSIONING THE DRAYTON DIGISTAT RF WIRELESS SYSTEM

1. Pop the Digistat unit off the wall and take over to SCR unit
2. Pull down battery drawers in Digistat unit and allow screen to go blank
3. Turn off the power supply to the SCR receiver unit and leave for 5 seconds
4. Turn on power to SCR unit and check red light is on
5. Press override button No.2 and check the green light comes on and boiler fires
6. Press & hold down button No.1 (Keep depressed), then press No.2 and keep depressed
{The Red LED light will flash a couple of times and then it will go out}
7. Now release both the buttons – {the two LED lights should come back on}
8. Get the Digistat unit and stand two metres away from the SCR unit with the Digistat unit in your hand
9. Slide in the right hand battery drawer under the “Plus” button first
10. Slide in the left hand battery drawer under the “Minus” button second
11. The Red LED light will now flash for approx. 7 seconds to tell you that the two units are initialising themselves to each other
12. Put the Digistat unit back on the wall

This data sheet is intended as a quick commissioning guide.

If you require further details please refer to the full set of commissioning instructions which come with the units or alternatively please ring our sales team for a full set of instructions